



Radio Shack®

Model

4

Quick

Reference

Guide

Contents

Start-Up

TRSDOS

Commands and Utilities

Error Messages

BASIC

Statements and Functions

Control Keys

Operators

Edit Commands

Special Characters

Error Messages

Internal Codes

Start-Up

Make sure all floppy disk drives are empty and all equipment is off.

1. Turn on all peripheral equipment (such as a printer), except the hard disk.
2. Hard disk users: Turn on the primary hard disk drive.
3. Turn on the computer.
4. Insert a system diskette into Drive 0 and close the drive door. TRSDOS displays its start-up message.
5. TRSDOS prompts you for the date. Enter it in the *mm/dd/yy* format.
6. The following system prompt will appear on your screen:

TRSDOS Ready

Now, you can type in a TRSDOS command.

7. To start BASIC, type:

BASIC **(ENTER)**

and you see the BASIC prompt:

Ready

represents a value that you supply. Information within brackets is optional.

Now, you can type in a BASIC command.

This Quick Reference Guide is divided into two sections: TRSDOS and BASIC.

Information which is non-shaded (like this) pertains to:

- TRSDOS intermediate commands and utilities
- BASIC statements

Information which is shaded *like this* pertains to:

- TRSDOS advanced commands and utilities
- BASIC functions

Commands and Utilities

Those parts of the command line that you must enter are **highlighted**. Information that is upper-case should be typed in exactly as is. Information that is lower-case represents a value that you supply. Information within brackets is optional.



APPEND **source** [TO] **destination** [(ECHO,STRIP)]
Adds one disk file onto the end of another.

ATTRIB **file** (USER="password",OWNER="password",
PROT=level,VIS,INV)
Changes the protection of a file. The *level* can be
EXEC, READ, UPDATE, WRITE, RENAME, REMOVE,
or FULL.

```
ATTRIB CUSTFILE/DAT:1 (USER="",  
OWNER="BOSSMAN",PROT=READ,VIS)
```

ATTRIB [:drive] (**LOCK,UNLOCK,MPW**="password",
NAME="disk name",PW=["password"])

Changes the protection of files on a drive.

```
ATTRIB :1 (NAME="DATA",PW="SECRET",  
MPW="BOSSMAN")
```

AUTO [:drive,?:drive,=:drive] [*] [command line]
Stores a *command line* for automatic execution each
time TRSDOS starts up. (AUTO by itself deletes the
current AUTO command line.)

```
AUTO BASIC AUTO *DO INIT/JCL:1
```

BACKUP [file]:**source drive** [TO] :**destination drive**
[(MPW="password",SYS,INV,MOD,QUERY=YES,OLD,
NEW,X,DATE="date")]
Duplicates a system or data diskette. (*file* can be a
partial name.)

```
BACKUP :0 :1  
BACKUP (MOD, QUERY, MPW="SECRET")
```

BOOT [(CLEAR), (ENTER), (D)]

Resets the system.

```
BOOT
```

BUILD **file** [(HEX,APPEND)]

Creates an input file for JCL, KSM, and other TRSDOS
commands.

```
BUILD MYPROGA/FIX:0  
BUILD DISPLAY/BLD (HEX)
```

CLICK/FLT

SET device [TO] **CLICK/FLT**

FILTER *KI device

Establishes the key-click filter.

COM/DVR

SET *CL [TO] COM/DVR

Prepares the Communications Line (*CL) for use.

COMM device[(XLATES=X'αabb',XLATER=X'αabb',
XON=X'cc',XOFF=X'cc',NULL=OFF)]

Lets two computers communicate via a device.

**CONV [file]:source drive [:destination drive] [(VIS,
INV,SYS,NEW,OLD,QUERY=NO,DIR)]**

Converts files from a TRSDOS 1.3 (Model III) diskette
onto a TRSDOS Version 6 formatted diskette. (*file* can
be a partial name.)

CONV :1 :0 (VIS,Q=NO)

**COPY source [TO] destination [(LRL=nnn,
CLONE=NO,ECHO,X)]**

Copies data from one file or device to another.

COPY TEST/DAT TO :1

COPY *KI TO *PR (ECHO)

**CREATE file [(LRL=number,REC=number,
SIZE=number)]**

Creates a file and reserves space on the disk for future
use.

CREATE INVENT/DAT (SIZE=20)

DATE [mm/dd/yy]

Sets or displays the current date.

DATE 08/09/82 DATE

DEBUG [(ON, OFF)] [(EXT)]

Sets up the debug monitor for testing and debugging
machine-language programs.

DEBUG DEBUG (OFF)

DEVICE [(D=NO,B=YES,S=NO,P=YES)]

Displays the current status of each drive and the
options in use.

DEVICE DEVICE (B=YES)

**DIR [file] [:drive] [(ALL,INV,MÓD,NON,PRT,SYS,DATE,
DATE="date",SORT=NO)]**

Lists the directory of a drive or file. (*file* can be a partial
name.)

DIR :1 DIR (DATE="10/01/81-")

DO [S,*,*] file [(@label,parm=value)] [:]

Compiles and executes a DO file.

DO DRIVE/JCL DO = DRIVE/JCL

**DUMP file (START = address, END = address,
TRA = address, ASCII, ETX = value)**

Copies an area of memory to a disk file.

```
DUMP ROUTINE/CMD  
(START=X'7000',END=X'8000',  
TRA=X'7000')
```

FILTER device [USING] phantom device

Filters data to or from a device, using a filter program.

```
FILTER *PR USING *DU
```

FORMAT :drive (ABS,NAME = "disk name",

**MPW = "password",SDEN,DDEN,CYL = number,
QUERY = NO)**

Formats a blank or old disk for use.

```
FORMAT  
FORMAT :1 (NAME="DATA3",  
MPW="SECRET")
```

**FORMS [(DEFAULT,ADDLF,CHARS = number,FFHARD,
INDENT = number,LINES = number,
MARGIN = number,PAGE = number,QUERY, TAB,
XLATE = X'acbb')]**

Sets up printer options.

```
FORMS (MARGIN=10,CHARS=80,INDENT=6)
```

FORMS/FLT

SET *PF [TO] FORMS/FLT

FILTER *PR *PF

Prepares the Printer Filter (*PF) for use.

FREE [:drive] [(PRT)]

Lists free space and number of files on each disk; if
drive is specified, displays space map of that disk.

```
FREE FREE :0 (PRT)
```

JOBLOG

ROUTE *JL [TO] file

ROUTE *JL [TO] device

Establishes the Joblog device (*JL), which sends
certain information to a file or device.

```
ROUTE *JL TO LISTER/JBL  
ROUTE *JL TO *PR
```

KSM/FLT

SET device KSM/FLT [USING] file

[(ENTER = value)]

FILTER *KI device

```
SET *DU KSM/FLT USING ROUTINE/KSM  
FILTER *KI *DU
```

LIB

Displays library commands.

LIB

LINK device1 [TO] device2

Links two logical devices.

LINK *DO *PR

LIST file [(ASCII8,NUM,HEX,TAB = number, PRT, LINE = number, REC = number, LRL = number)]

Lists contents of a file to the display or printer.

LIST TESTFILE:0

LIST MONITOR/CMD (PRT)

LOAD [(X)] file

Loads a program file into memory.

LOAD STATUS/CMD

LOAD (X) PROGRAM/CIM

MEMDISK/DCT

SYSTEM (DRIVE = drive, DRIVER = "MEMDISK")

Adds to the system a pseudo floppy drive which keeps its files in memory.

SYSTEM (DRIVE=2, DRIVER="MEMDISK")

MEMORY [(CLEAR = value, HIGH = address,

LOW = address, ADD = address, WORD = word,

BYTE = byte, GO = address)]

Reserves a portion of memory, sets or displays current HIGH\$ and LOW\$, modifies a memory address, or jumps to a specified memory location.

MEMORY

MEMORY (ADD=X'E100', WORD=X'3E0A')

PATCH file (patch commands)

Changes the contents of a disk file.

PATCH MONITOR/CMD (X'E100'=C3 66 00)

PATCH file1 USING file2 [(YANK, REMOVE)]

Makes changes contained in file2 to file1.

PATCH BACKUP/CMD:0 USING SPECIAL/FIX

PURGE [file]:drive [(QUERY = NO, MPW = "password", INV.SYS, DATE = "date")]

Deletes files. (file can be a partial name.)

PURGE :0 (MPW="SECRET")

PURGE /BAS:1 (Q=N)

REMOVE file [file] ...

Deletes files from the directory.

REMOVE ALPHA/DAT:0 BREAKER/DAT:0

REMOVE device [device] ...

Removes devices from the device table.

REMOVE *LU

RENAME file1 [TO] **file2**

RENAME device1 [TO] **device2**

Changes the name of a file or device.

RENAME TEXT/DAT:0 TO OLD/DAT

RENAME *UD TO *TX

REPAIR :drive

Updates system information on disks which were formatted under Model I TRSDOS.

REPAIR :1

RESET device

RESET file

Returns a device to its original start-up condition.

Closes an open file.

RESET *PR RESET PRINTER/DAT

ROUTE device1 [TO] **device2**

ROUTE device [TO] **file** [(REWIND)]

ROUTE device (NIL)

Routes a device to another device, to a disk file, or to nothing (NIL).

ROUTE *PR *DQ

ROUTE *PR TO PRINTER/DAT

[RUN] [(X)] **file** [(command text)]

Loads and executes a program. *command text* is optional values the program may require.

RUN CONTROL/CMD CONTROL/CMD

SET device [TO] **driver file** [(parameters)]

Assigns a driver program to a device. *parameters* are optional values the driver program may require.

SET *SP TO SERIAL/DRV

SET phantom device [TO] **filter file** [USING]

[parameters]

Assigns a filter program to a phantom device.

parameters are optional values the filter program may require.

SET *LC TO TRAP/FLT

SETCOM [(DEFAULT, BAUD = number, WORD = number, STOP = number, PARITY = switch, QUERY, BREAK = value, EVEN, ODD)]

Sets up RS-232C communications or display status.

SETCOM (BAUD=300,WORD=8,STOP=1,
PARITY=OFF)

SETKI [(DEFAULT, RATE = number, WAIT = number, QUERY)]

Sets keyboard repeat values. (SETKI by itself displays current values.)

SETKI (DELAY=15)

SPOOL [device] [TO] [file] (NO, MEM = number, BANK = number, DISK = number, PAUSE, RESUME, CLEAR)

Establishes an output buffer for a device.

SPOOL *PR TO TEXTFILE:0

(MEM=5, DISK=15)

SPOOL *PR (NO)

SYSGEN [(switch)] [(DRIVE = drive)]

Stores current system options in a file (CONFIG/SYS) on drive. If switch is NO, the configuration file is removed.

SYSGEN (YES) (DRIVE=4)

SYSGEN (NO)

SYSTEM (parameters)

Selects certain options of your TRSDOS system. In the following SYSTEM commands, switch is YES or NO.

SYSTEM (ALIVE[= switch])

Displays a moving character when task processor is running.

SYSTEM (BLINK = switch)

SYSTEM (BLINK = number)

SYSTEM (BLINK, [LARGE, SMALL])

Control the cursor character.

SYSTEM (BREAK[= switch])

Enables or disables BREAK key.

SYSTEM (DATE[= switch])

Turns on or off the start-up date prompt.

SYSTEM (DRIVE = drive, [CYL = number,

DELAY = NO/YES, DISABLE, ENABLE,

DRIVER = "file", WP = switch])

Sets parameters for drive.

SYSTEM (SYSRES = number)

Adds TRSDOS system overlays into high memory.

SYSTEM (SYSTEM = drive)

Assigns drive as system drive.

SYSTEM (TIME[= switch])

Turns on or off the start-up time prompt.

SYSTEM (TRACE[= switch])

Displays contents of Program Counter.

SYSTEM (TYPE[= switch])

Turns on or off the KI/DVR type-ahead feature.

TAPE100

TAPE100 file1 [TO] file2 (READ,WRITE)

Reads a Model 100 cassette tape file and writes it to a disk file, or reads a disk file and writes it to cassette tape.

TAPE100 PRINTER TO PRINT/DAT:0 (READ)

TIME [hh:mm:ss] [(CLOCK = YES/NO)]

Sets the time or displays current time.

TIME TIME 12:29:34

VERIFY [(switch)]

Sets VERIFY function on or off.

VERIFY (YES) VERIFY (NO)

Error Messages

Number	Message	Explanation/ Action
7 X'07'	Attempted to read locked/deleted data record	Check for error in program
6 X'06'	Attempted to read system data record	Check for error in program
5 X'05'	Data record not found during read	Try again; use another disk; refor- mat old disk
13 X'0D'	Data record not found during write	Try again; use another disk
39 X'27'	Device in use	Reset device in use before REMOVEing it
8 X'08'	Device not available	Check device specifi- cation; make sure peripheral is ready
30 X'1E'	Directory full — can't extend file	Copy files to new disk
17 X'11'	Directory read error	Try another drive or disk
18 X'12'	Directory write error	Try another disk
27 X'1B'	Disk space full	Write file to a disk with more available space
28 X'1C'	End of file encountered	Check for error in program
63	Extended error	Error code is in HL register
25 X'19'	File access denied	Use correct pass- word; use no pass- word for unprotected file
41 X'29'	File already open	Use RESET to close the file
24 X'18'	File not in directory	Check spelling of filespec
38 X'26'	File not open	Open file before access
20 X'14'	GAT read error	Try another drive
21 X'15'	GAT write error	Try another drive or disk
22 X'16'	HIT read error	Try another drive



23 X'17'	HIT write error	Try another drive or disk
37 X'25'	Illegal access attempted to protected file	OWNER password is required for the requested access
32 X'20'	Illegal drive number	Drive is not in system or not ready for access
19 X'13'	Illegal file name	Use proper filespec syntax
16 X'10'	Illegal logical file number	Check for error in program
34 X'22'	Load file format error	Attempt was made to load a non-program file
3 X'03'	Lost data during read	Try another drive or disk
11 X'0B'	Lost data during write	Try another drive or disk
42 X'2A'	LRL open fault	COPY file to another file that has the specified LRL
33 X'21'	No device space available	REMOVE non-system devices to provide more space
26 X'1A'	No directory space available	Use a different disk or REMOVE unwanted files
0 X'00'	No error	Check for error in program
1 X'01'	Parity error during header read	Try another drive or disk
9 X'09'	Parity error during header write	Try another drive or disk
4 X'04'	Parity error during read	Try another drive or disk
12 X'0C'	Parity error during write	Try another drive or disk
31 X'1F'	Program not found	Check spelling of filespec; check for proper disk in drive
40 X'28'	Protected system device	System devices cannot be REMOVED
29 X'1D'	Record number out of range	Provide correct record number or try another copy of the file

2 X'02'	Seek error during read	Set step rate with SYSTEM command or try another drive or disk
10 X'0A'	Seek error during write	Set step rate with SYSTEM command or try another drive or disk
—	Unknown error code	Check for error in program
14 X'0E'	Write fault on disk drive	Try another disk or drive
15 X'0E'	Write protected disk	Remove write-protect tab or write enable disk using SYSTEM command

BASIC Statements and Functions

Terms:

integer:

A whole number from - 32768 to 32767

string:

a sequence of characters which is to be taken
verbatim

dummy number or dummy string:

a number or string used in an expression to meet
syntactic requirements, but whose value is
insignificant.



ABS (*number*)

Computes the absolute value of *number*.

$Y = \text{ABS}(X)$

ASC (*string*)

Returns the ASCII code for the first character of *string*.

`PRINT ASC ("A")`

ATN (*number*)

Computes the arctangent of *number*; returns the value
in radians.

$Y = \text{ATN}(X/3)$

AUTO [*line*] [*increment*]

Automatically generates line numbers every time you
press **ENTER**. AUTO begins numbering at *line* and
displays the next line using *increment*.

`AUTO AUTO 1000, 100 AUTO , 5`

CALL *address* [*parameter list*]

Transfers program control to an assembly-language
subroutine stored at *address*. The *parameter list*
contains the values to be passed to the external
subroutine.

CDBL (*number*)

Converts *number* to double precision.

$Y\# = \text{CDBL}(N*3)$

CHR\$ (*code*)

Returns the corresponding character of the ASCII or
control *code*.

`PRINT CHR$(35)`

CHAIN [MERGE] *filespec* [*line*] [ALL] [DELETE
line - line]

Loads a BASIC program named *filespec*, chains it to a "main" program, and begins running it. The *line* is the first line to be run in the CHAINED program. The ALL option passes every variable in the main program to the CHAINED program. The MERGE option "overlays" the lines of *filespec* with the main program. The DELETE option erases lines in the overlay so that you can MERGE in a new overlay.

CINT (*number*)

Converts *number* to integer representation.

PRINT CINT(17.65)

CLEAR [*memory location*] [*stack space*]

Clears the value of all variables and closes all open files. Optionally, it also sets the highest *memory location* for BASIC and the amount of *stack space*.

CLEAR CLEAR, 75 CLEAR, 61000, 200

CLOSE *buffer...*

Closes access to a file. The *buffer* number (the same used to OPEN the file) may be from 1 to 15.

CLOSE 1, 2, 8

CLOSE FIRST% + COUNT%

CLS

Clears the screen.

CLS

COMMON *variable...*

Passes one or more variables to a CHAINED program.

100 COMMON A, B, C, D(), G\$

110 CHAIN "PROG3", 10

CONT

Resumes execution of a program when it has been stopped by the (BREAK) key or by a STOP or an END statement in the program.

CONT

COS (*number*)

Computes the cosine of *number*.

Y = COS(X * .01745329)

CSNG (*number*)

Converts *number* to single precision.

CSNG(.1453885509)

CVD(*8-byte string*)

Restores the string value to a numeric value.

A# = CVD (GROSSPAY\$)

CVI (2-byte string)

Restores the string value to a numeric value.

CVS (4-byte string)

Restores the string value to a numeric value.

DATA constant,...

Stores numeric and string constants to be accessed by a READ statement.

```
1340 DATA NEW YORK, CHICAGO, LOS
      ANGELES, PHILADELPHIA, DETROIT
1350 DATA 2.72, 3.14159, 0.0174533,
      57.29578
```

DATE\$

Returns today's date.

```
PRINT DATE$
```

DEFDBL/INT/SNG/STR

```
DEFDBL letter,...
DEFINT letter,...
DEFSNG letter,...
DEFSTR letter,...
```

Defines any variables beginning with the *letter(s)* as: (DBL) double precision, (INT) integer, (SNG) single precision, or (STR) string.

```
10 DEFDBL L-P      10 DEFINT I-N, W, Z
10 DEFSNG I, Q-T 10 DEFSTR A
```

DEF FN *function name [(argument,...)] = function definition*

Defines *function name* according to *function definition*. The *argument* represents those variables in the *function definition* that are to be replaced when the function is called.

```
DEF FNR=RND(90)+9
```

DEFUSR [digit] = address

Defines the starting *address* for *digit* assembly-language subroutines.

```
DEFUSR3 = &H7D00
DEFUSR = (BASE + 16)
```

DELETE line1 - line2

Deletes from *line1* to *line2* of a program in memory.

```
DELETE 70      DELETE 50-110      DELETE
```

DIM array (dimension(s)), array (dimension(s)),...

Sets aside storage for the *arrays* with the *dimensions* you specify.

```
DIM AR(100)      DIM L1%(8,25)
```

EDIT *line*

Enters the edit mode so that you can edit *line*.

```
EDIT 100 EDIT
```

END

Ends execution of a program.

```
END
```

EOF(*buffer*)

Detects the end of a file.

```
IF EOF(1) THEN GOTO 1540
```

ERASE *array*,...

Erases one or more *arrays* from a program.

```
ERASE C,F
```

ERL

Returns the line number in which an error has occurred.

```
PRINT ERL E = ERL
```

ERR

Returns the error code (if an error has occurred).

```
IF ERR = 7 THEN 1000 ELSE 2000
```

ERR\$

Returns a system error number and message.

```
PRINT "THE LATEST TRSDOS ERROR IS  
":ERR$
```

ERROR *code*

Simulates the error associated with *code* during program execution.

```
ERROR 1
```

EXP (*number*)

Calculates the natural exponential of *number*.

```
PRINT EXP(-2)
```

FIELD *buffer*, *length* AS *field name*,...

Divides a direct-access *buffer* into one or more fields. Each field is identified by the *field name* and is the *length* you specify.

```
FIELD 3, 128 AS A$, 128 AS B$
```

FIX (*number*)

Returns the truncated integer of *number*.

```
PRINT FIX(2.6)
```

FOR/NEXT

FOR *variable* = *initial value* TO *final value* [STEP *increment*]

Establishes a program loop.

20 FOR H=1 TO 2 STEP -2

FRE(*dummy number*)

Returns the amount of free memory space.

PRINT FRE(44)

FRE(*dummy string*)

Returns the amount of free string space.

PRINT FRE("44")

GET *buffer* [, *record number*]

Gets a *record* from a direct disk file and places it in a *buffer*.

GET 1 GET 1, 25

GOSUB *line*

Goes to a subroutine, beginning at the specified *line*.

GOSUB 1000

GOTO *line*

Goes to the specified *line*.

GOTO 100

HEX\$ (*number*)

Calculates the hexadecimal value of *number*.

PRINT HEX\$(30), HEX\$(50), HEX\$(90)

IF...THEN...ELSE

IF *expression* THEN *statement(s)* or *line* ELSE
[*statement(s)*] or [*line*]

Tests a conditional expression and makes a decision regarding program flow.

IF X > 127 THEN PRINT "OUT OF
RANGE" : END

IF A < B THEN PRINT "A < B" ELSE
PRINT "B < A"

INKEY\$

Returns a keyboard character.

A\$ = INKEY\$

INP(*port*)

Returns the byte read from a *port*. *Port* may be any integer from 0 to 255.

100 A=INP(255)

INPUT\$ (*number* [,*buffer*])

Inputs a string of *number* characters from either the keyboard or a sequential disk file. The *number* must be a value from 1 to 255.

A\$ = INPUT\$(5) A\$ = INPUT\$(11,3)

INPUT ["*prompt string*";] *variable1*, *variable2*,...

Inputs data to a program during execution.

INPUT Y%

INPUT# *buffer*, *variable*,...

Inputs data from a sequential disk file into one or more variables.

INPUT#1, A, B INPUT#4, A\$, B\$, C\$

INSTR(*integer*, *string1*, *string2*)

Searches for the first occurrence of *string2* in *string1* and returns the position at which the match is found.

INSTR(A\$, "12")

INT(*number*)

Converts *number* to integer value.

PRINT INT(79.89)

LEFT\$(*string*, *integer*)

Returns all characters left of position *integer* in the *string*.

PRINT LEFT\$("BATTLESHIPS", 6)

LEN(*string*)

Returns the number of characters in *string*.

X = LEN(SENTENCE\$)

KILL *filespec* from the disk.

KILL "FILE/BAS" KILL "DATA:2"

LET *variable* = *expression*

Assigns the value of *expression* to *variable*.

LET A\$ = "A ROSE IS A ROSE"

LET B1 = 1.23

LINE INPUT [,] [*prompt message*;] *string variable*

Inputs a line from the keyboard.

LINE INPUT A\$

LINE INPUT# *buffer*, *variable*

Reads a line of data from a sequential-access file into a *string variable*. The *buffer* is the number used when the file was OPENed.

LINE INPUT# 1, A\$

LIST [*startline*] - [*endline*]

Lists program lines to the display.

LIST 50 LIST 50-85 LIST-227

LLIST [*startline*] - [*endline*]

Lists program lines to the line printer.

LLIST 780 LLIST 50- LLIST,-

LOAD *filespec* [,R]

Loads *filespec*, a BASIC program, into memory. If R is used, the program is RUN automatically.

LOAD "PROG1/BAS:2"

LOAD "PROG1/BAS"

LOC *buffer*

Returns the current record number.

IF LOC(1)>55 THEN END

LOF *buffer*

Returns the end-of-file record number.

Y = LOF(5)

LOG(*number*)

Computes the natural logarithm of *number*.

PRINT LOG(3.14159)

Z = 10*LOG(PS/P1)

LPOS (*number*)

Returns the position of the line printer's print head within the line printer's buffer.

100 IF LPOS(X)>60 THEN PRINT CHR\$(13)

LPRINT *data*,...

Prints *data* at the printer.

LPRINT (A * 2)/3

LPRINT USING *format*; *data*,...

Prints *data* at line printer, using a specified *format*.

LPRINT USING "####,."; 2.17

LSET *field name* = *data*

Sets *data* in a direct-access buffer *field name*. The data is left-justified.

LSET NM\$ = "JIM CRICKET, JR."

MEM

Returns the amount of memory.

PRINT MEM

MERGE *filespec*

Loads *filespec*, a BASIC program, and merges it with the program currently in memory.

```
MERGE "PROG2/TXT"
```

MID\$ (*old string*, *position*, *length*) = *replacement string*

Replaces a portion of *old string* with *replacement string*.

```
MID$ (A$, 3, 4) = "12345": PRINT A$
```

MID\$ (*string*, *integer* [*number*])

Returns a substring of the *string*, beginning with the *integer* character. *Number* is the number of characters to include in the substring.

```
MID$ (A$, 3, 2)
```

MKD\$ (*integer expression*)

Converts *integer expression* to a string value and returns the 8-byte string.

MKI\$ (*single-precision expression*)

Converts *single-precision expression* to a string value and returns the 2-byte string.

MKS\$ (*double-precision expression*)

Converts *double-precision expression* to a string value and returns the 4-byte string.

NAME *old filespec* AS *new filespec*

Renames *old filespec* as *new filespec*.

```
NAME "FILE" AS "FILE/OLD"
```

NEW

Erases a program from memory and clears all variables.

```
NEW
```

OCT\$ (*number*)

Computes the octal value of *number*.

```
PRINT OCT$(30), OCT$(50),  
OCT$(90)
```

ON ERROR GOTO *line*

Goes to a subroutine at the *line* specified by the value of *number*.

```
10 ON ERROR GOTO 1500
```

ON *expression* **GOSUB** *line*,...

Goes to a subroutine at the *line* specified by the value of *expression*

```
ON L-1 GOSUB 1000, 2000, 3000
```

ON *expression* **GOTO** *line, line...*

Goes to the *line* specified by the value of *expression*.

ON X GOTO 190, 200, 210

OPEN *mode, buffer, filespec* [*record length*]

Opens a disk file in the specified mode. (O for sequential output, I for sequential input, D or R for direct input/output, and E for sequential extend).

OPEN "O", 1, "CLIENTS/TXT"

OPEN "D", 5, "TESTED/BAS", 64

OPTION BASE *n*

Sets *n* as the minimum value for an array subscript.

OPTION BASE 1

OUT *port, data byte*

Sends *data byte* to a machine output *port*.

100 OUT 32,100

PEEK(*memory location*)

Returns a byte from *memory location*.

A = PEEK (&H5A00)

POKE *memory location, data byte*

Writes a *data byte* into *memory location*.

10 POKE 15360, 191

POS(*number*)

Returns the position of the cursor. *Number* is a dummy argument.

PRINT TAB(40) POS(0)

PRINT @ *location*.

PRINT @ (*row, column*).

Specifies where printing is to begin.

PRINT TAB(*n*)

Moves the cursor to the *n* position on the current line (or on succeeding lines if you specify TAB positions greater than 79).

PRINT TAB(5) "TABBED 5";

TAB(25) "TABBED 25"

PRINT# *buffer, item 1, item 2,...*

Prints data *items* in a sequential disk file.

PRINT#1, A,B

PUT *buffer* (*record*)

Puts a *record* in a direct-access file. *Buffer* is the number used to OPEN the file.

PUT 1 PUT 1, 25

RANDOM

Reseeds the random number generator.

RANDOM

READ *variable1, variable2*

Reads values from a DATA statement and assigns them to *variables*.

READ T READ S\$, T, U

REM

Inserts a remark line into a program and instructs the computer to ignore the rest of the program line.

2000 INPUT A

:REM INPUT SINGLE-PRECISION

RENUM *new line, line [,increment]*

Renums a program, starting at the specified *line* and numbering it as *new line*. The optional *increment* sets the increment to be used between each line number.

RENUM RENUM 6000, 5000, 100

RESTORE *line*

Restores a program's access to previously read DATA statements.

RESTORE

RESUME [*line*]**RESUME NEXT**

Resumes program execution after an error-handling routine has been performed. RESUME *line* causes BASIC to branch to the specified line. RESUME NEXT causes it to branch to the statement following the point at which the error occurred.

RESUME RESUME 10 RESUME NEXT

RETURN

Returns control to the line immediately following the most recently executed GOSUB.

RETURN

RIGHT\$(*string, number*)

Returns the last *number* characters of the *string*.

PRINT RIGHT\$("WATERMELON", 5)

RND(*number*)

Generates a pseudorandom number between 0 and the *number*. The *number* must be greater than 0 and less than 32768.

A = RND(2) A = RND(45)

PRINT RND(0)

ROW (*number*)

Returns the row position of the cursor. *Number* is a dummy argument.

X = ROW(Y)

ROW(*number*)

Returns the row position of the cursor. *Number* is a dummy argument.

X = ROW(Y)

RSET *field name* = *data*

Places *data* in a direct-access buffer *field name*.

RSET NM\$ = "JIM CRICKET, JR."

RUN [*line*]**RUN** *filespec* [,R]

RUN or RUN *line* runs the program that is in memory.

RUN *filespec* loads a program from disk, then runs it.

RUN "PROGRAM/A" RUN "EDITDATA", R

SAVE *filespec* [,A] [,P]

Saves a program in a disk under *filespec*. A causes the file to be stored in ASCII format. P causes the file to be stored in an encoded binary format.

SAVE "FILE1/BAS.JOHNQDOE:3"

SAVE "MATHPAK/TXT", A

SGN (*number*)

Determines *number*'s sign. If *number* is positive, SGN returns 1. If it is negative, SGN returns -1. If it is zero, SGN returns 0.

Y = SGN(A * B)

SIN(*number*)

Computes the sine of *number*; the *number* must be in radians.

PRINT SIN(7.96)

SPACES\$(number)

Returns a string of *number* spaces. The *number* must be from 0 to 255.

PRINT "DESCRIPTION" SPACES(4)

SPC(*number*)

Prints a line of *number* blanks. The *number* must be from 0 to 255.

PRINT "HELLO" SPC(15) "THERE"

SQR(*number*)

Calculates the square root of *number*.

PRINT SQR(155.7)

STOP

Stops program execution.
STOP

STRING\$(number, character)

Returns a string of the specified *number* of characters. The *number* must be from 0 to 255. The *character* is a string or an ASCII code.

```
B$ = STRING$(25, "X")  
PRINT STRING(50, 10)
```

STR\$(number)

Converts *number* into a string. If the *number* is positive, STR\$ places a blank before the string.

SWAP variable1, variable2

Exchanges the values of two variables.
SWAP F1#, F2#

SYSTEM [command]

Returns to TRSDOS. If you specify a *command*, TRSDOS executes it and returns you to BASIC.

```
SYSTEM SYSTEM "DIR"
```

TAB(number)

Spaces to position *number* on the display. The *number* must be from 0 to 255.

```
PRINT A$ TAB(25) B$
```

TAN(number)

Computes the tangent of *number*. The *number* must be in radians. If it is in degrees, use TAN (*number* * .11745329). The result is always single precision.

```
PRINT TAN(7.96)
```

TIME\$

Returns the time (in 24-hour format).

```
A$ = TIME$
```

TROFF

Turns off the trace function.
TROFF

TRON

Turns on the trace function (to follow program flow).
TRON

USR[digit] (expression)

Calls the user's assembly-language subroutine identified by *digit* and passes the result of *expression*.

```
X = USR5(Y)
```

VAL(*string*)

Calculates the numeric value of *string*. VAL terminates its evaluation on the first character that has no meaning in a numeric term.

```
PRINT VAL("100 DOLLARS")
```

VARPTR *variable* or *buffer*

Returns the absolute memory address. When used with a *variable*, VARPTR returns the address of the first byte of data identified with *variable*. When used with a *buffer*, it returns the address of the file's data buffer.

```
Y = USR1(VARPTR(X))
```

WAIT *port*, *integer1* [*integer2*]

Suspends program execution until a machine input *port* develops a specified bit pattern.

```
100 WAIT 32,2
```

WHILE *expression*

```
.  
.   
.
```

WEND

Executes a series of statements in a loop as long as a given condition is true.

```
WHILE ...,WEND
```

WRITE *data*,...

Prints *data* on the display.

```
WRITE A,B,C$
```

WRITE# *buffer*, *data*,...

Writes *data* to a sequential file.

```
WRITE#1, A$,B$
```

Control Keys

Command Mode

␣ or CTRL H	Backspaces the cursor, erasing the preceding character in the line.
SPACEBAR	Enters a blank space character and advances the cursor one space.
BREAK	Interrupts line entry and starts over with a new line.
CTRL J	Line feed — Starts a new physical line without ending the current logical line.
SHIFT Q or CAPS	Switches to either all upper case or all lower case.
ENTER	Ends and enters the current logical line.

Execution Mode

SHIFT @	Pauses execution. Press any other key (except BREAK) to continue.
BREAK	Terminates execution and returns to command mode.
ENTER	Interprets data entered from the keyboard with the INPUT statement.

Operators

Each operator or group of operators is precedent over the group below it.

()	(Parentheses)
^	(Exponentiation)
+, -	(Unary negative, positive)
*, /	(Multiplication, division)
\	(Integer division)
MOD	(Modulus)
+, -	(Addition, subtraction)
>, <, =, <=, >=, <>	(Relational tests)
NOT	
AND	
OR	
XOR	
EQV	
IMP	

Edit Commands

A	Moves the cursor to the beginning of the line and cancels editing changes.
nBACKSPACE	Moves the cursor <i>n</i> spaces to the left. If no <i>n</i> is given, moves cursor one space to the left.
nC	Lets you change <i>n</i> characters, beginning at the current cursor position.
nD	Deletes <i>n</i> characters to the right of the cursor.
E	Ends editing and saves all changes.
ENTER	Records all changes and exits edit mode.
ESC	Escapes from an insert subcommand (I, H, or X).
H	Deletes the rest of a line and lets you insert material at the current cursor position.
I	Lets you insert material at the current cursor position.
nKc	Deletes all characters up to the <i>n</i> th occurrence of character <i>c</i> and moves the cursor to that position.
L	Lists the line.
Q	Quits edit mode and cancels all changes.
nSc	Searches for <i>n</i> th occurrence of character <i>c</i> and moves the cursor to that position.
nSPACEBAR	Moves the cursor <i>n</i> spaces to the right.
X	Displays the rest of the line and lets you add material at the end.



Special Characters

,	(apostrophe) Abbreviation for :REM.
,	(comma) PRINT punctuation; spaces over to the next 16-column PRINT zone.
;	PRINT punctuation; separates items in a PRINT list but does not add spaces when they are output.
:	Separates statements on the same line.
.	Indicates current line; use with EDIT and LIST commands.
D	Used in double-precision exponential notation.
E	Used in single-precision exponential notation.
%	Makes variable integer-precision.
!	Makes variable single-precision.
#	Makes variable double-precision.
\$	Makes variable string type.

Error Messages

Code	Abbreviation	Explanation
1	NF	NEXT without FOR
2	SN	Syntax error
3	RG	Return without GOSUB
4	OD	Out of data
5	FC	Illegal function call
6	OV	Overflow
7	OM	Out of memory
8	UL	Undefined line
9	BS	Subscript out of range
10	DD	Redimensioned array
11	/0	Division by zero
12	ID	Illegal direct
13	TM	Type mismatch
14	OS	Out of string space
15	LS	String too long
16	ST	String formula too complex
17	CN	Can't continue
18	UF	Undefined user function
19		No RESUME
20		RESUME without error
21		Unprintable error
22		Missing operand
23		Line buffer overflow
26		FOR without NEXT
29		WHILE without WEND
30		WEND without WHILE

Disk Errors

50	Field overflow
51	Internal error
52	Bad file number
53	File not found
54	Bad file mode
55	File already open
57	Device I/O error
58	File already exists
61	Disk full
62	Input past end
63	Bad record number
64	Bad file name
66	Direct statement in file
67	Too many files

Internal Codes

Keyword	Code	Keyword	Code
ABS	65414	IMP	252
AND	248	INKEY\$	224
ASC	65429	INP	65424
ATN	65422	INPUT	133
AUTO	171	INSTR	219
CALL	182	INT	65413
CDBL	65438	KILL	200
CHAIN	185	LEFT\$	65409
CHR\$	65430	LEN	65426
CINT	65436	LET	136
CLEAR	146	LINE	177
CLOSE	195	LIST	147
CLS	159	LLIST	158
COMMON	184	LOAD	196
CONT	153	LOC	65454
COS	65420	LOF	65455
CSNG	65437	LOG	65418
CVD	65452	LPOS	65435
CVI	65450	LPRINT	157
CVS	65451	LSET	201
DATA	132	MEM	225
DATE\$	222	MERGE	197
DEF	151	MID\$	65411
DEFDBL	176	MKD\$	65458
DEFINT	174	MOD	253
DEFSNG	175	NAME	199
DEFSTR	173	NEW	148
DELETE	170	NEXT	131
DIM	134	NOT	214
EDIT	167	OCT\$	65433
ELSE	162	ON	149
END	129	OPEN	191
EOF	65453	OPTION	186
EQV	251	OR	249
ERASE	166	OUT	156
ERL	215	PEEK	65431
ERR	216	POKE	152
ERROR	168	POS	65425
ERRS\$	223	PRINT	145
EXP	65419	PUT	194
FIELD	192	RANDOM	187
FIX	65439	READ	135
FN	212	REM	143
FOR	130	RENUM	172
FRE	65423	RESTORE	140
GET	193	RESUME	169
GOSUB	141	RETURN	142
GOTO	137	RIGHT\$	65410
HEX\$	65434	RND	65416
IF	139	ROW	65459
RSET	202	TRON	163
RUN	138	USING	218
SAVE	203	USR	211
SGN	65412	VAL	65428



SIN	65417	VARPTR	221
SOUND	205	WAIT	150
SPACE\$	65432	WEND	181
SPC	213	WHILE	180
SQR	65415	WIDTH	161
STEP	210	WRITE	183
STOP	144	XOR	250
STR\$	65427	+	243
STRING\$	217	-	244
SWAP	165	*	245
SYSTEM	189	/	246
TAB	209	^	247
TAN	65421	\	254
THEN	208	,	220
TIME\$	226	>	240
TO	207	=	241
TROFF	164	<	242
